

Procedimento de atualização do Touch Screen


1º Passo

Inserir o pen-drive no produto contendo o arquivo de atualização.



2º Passo

Acessar a pasta Meu Computador através das teclas  + E e abrir o dispositivo (Disco removível) como a figura abaixo.

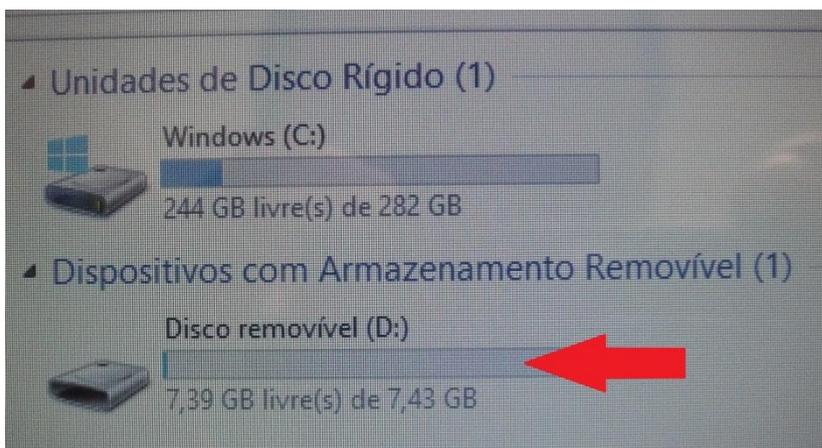


Você deverá encontrar a pasta (tc)




3º Passo

Abrir a pasta(TC) e executar o arquivo (parte 1) como figura abaixo

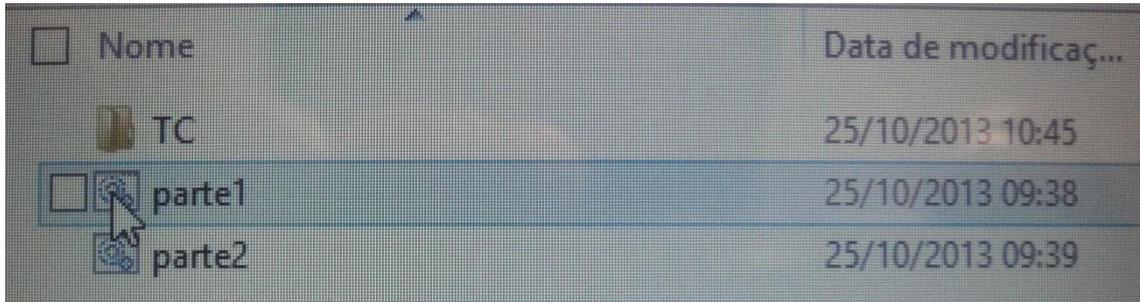


Aguardar até a mensagem (pressione qualquer tecla para continuar) apareça na tela como na figura abaixo.

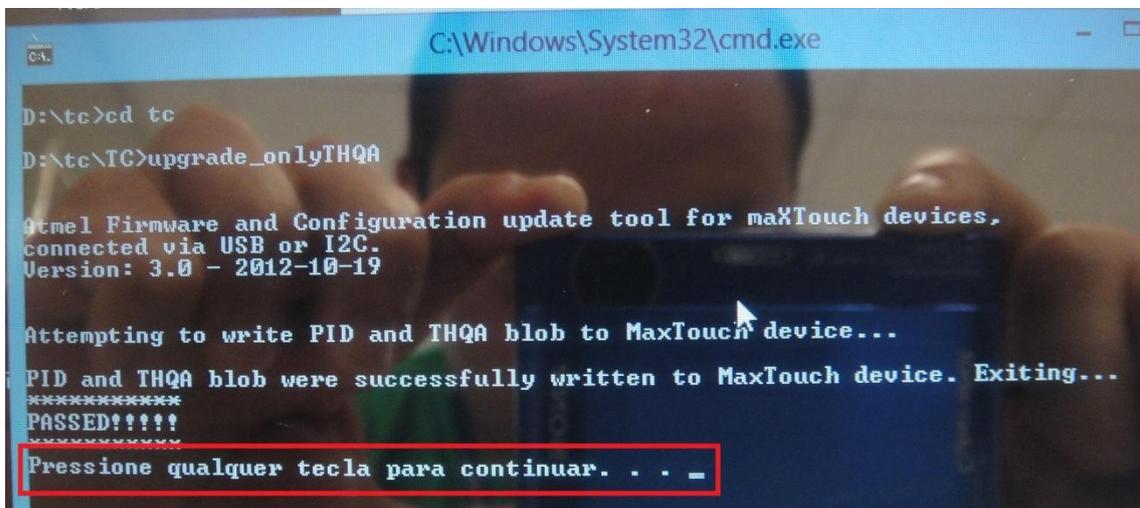


Pressione ENTER para finalizar a primeira parte da atualização.

4º Passo

Executar o arquivo (parte 2) como na figura abaixo.

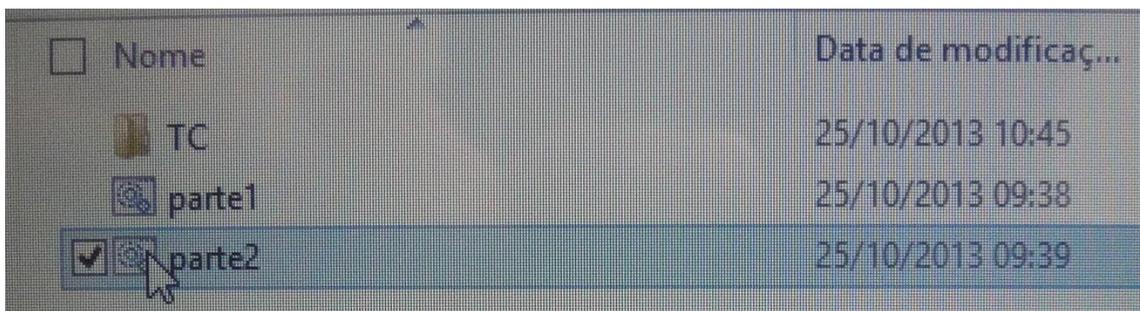

Aguardar até a mensagem (pressione qualquer tecla para continuar) e verificar se as informações (PID:8433) estão iguais como na figura abaixo.

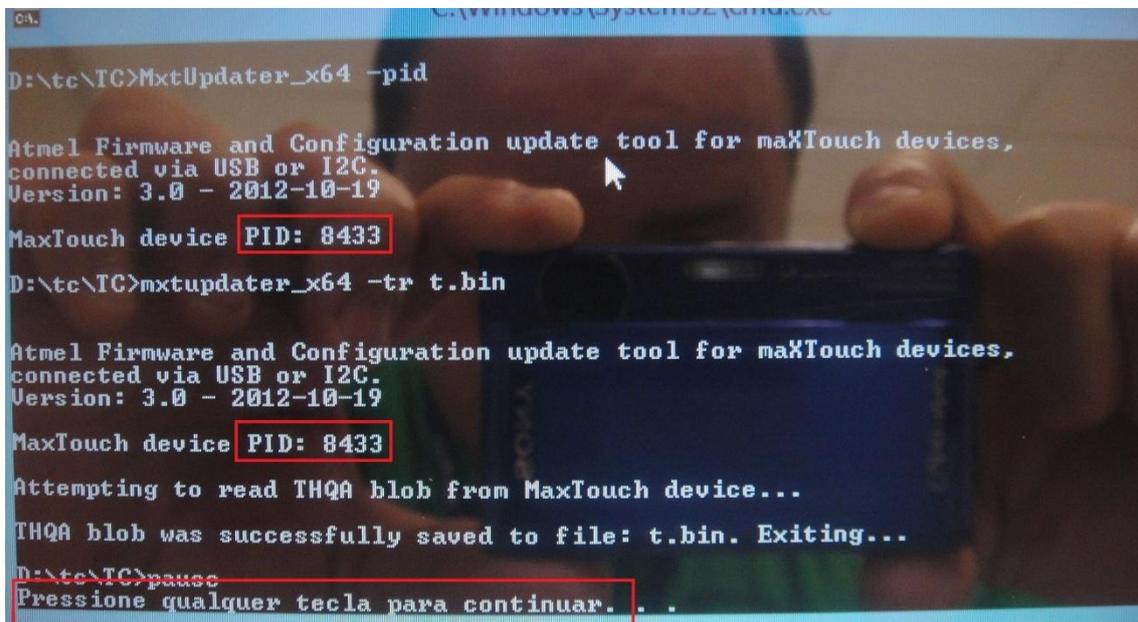

```
D:\tc\TC>MxtUpdater_x64 -pid

Atmel Firmware and Configuration update tool for maXTouch devices,
connected via USB or I2C.
Version: 3.0 - 2012-10-19

MaxTouch device PID: 8433

D:\tc\TC>mxtupdater_x64 -tr t.bin

Atmel Firmware and Configuration update tool for maXTouch devices,
connected via USB or I2C.
Version: 3.0 - 2012-10-19

MaxTouch device PID: 8433

Attempting to read THQA blob from MaxTouch device...
THQA blob was successfully saved to file: t.bin. Exiting...

D:\tc\TC>pause
Pressione qualquer tecla para continuar...
```

Pressione ENTER para finalizar.

O processo de atualização do touch screen está finalizado.